

GENERAL INFORMATION  
WIRE ROPE

Apply wire rope through the tie-down provisions on the vehicle and through the side stake pockets on the flat car in a complete loop, as shown. Application and diameter of wire rope will depend on the weight of the vehicle. Be sure that the vehicle weight includes any cargo on the vehicle. Apply a thimble under the side stake pocket to prevent chafing of wire rope, as shown. Secure the thimble to the wire rope with a cable clamp one or two sizes larger than the wire rope being used.

