


CATALYST BINS LOADED ON SPECIALLY EQUIPPED AND END OF CAR
CUSHION BULKHEAD FLAT

RAC 13002

New. 08-2001

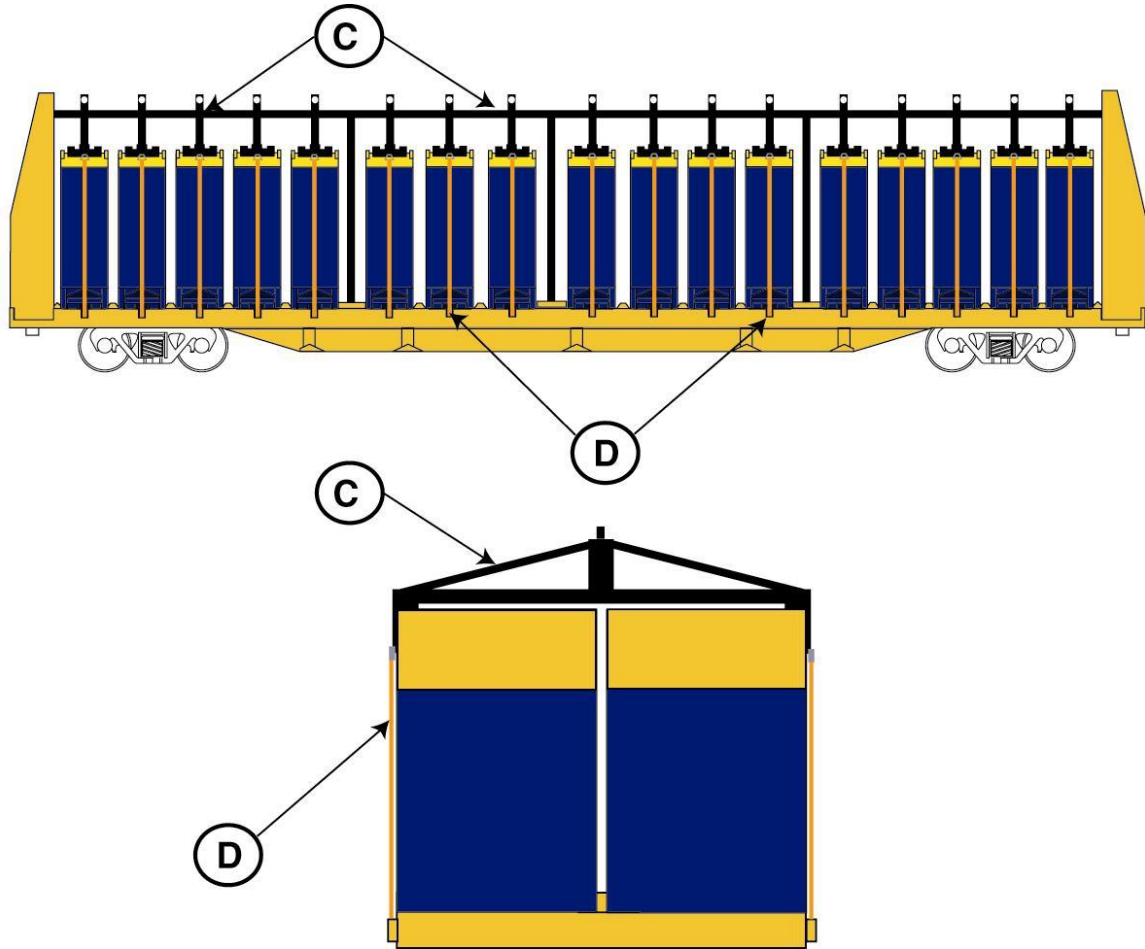

Item	Number of pieces	Description
A		Vacant
B		Vacant
C	1 for each pair of side-by-side bins	Bin Hanger Assembly must be properly seated on top of paired bins



**CATALYST BINS LOADED ON SPECIALLY EQUIPPED AND END OF CAR
CUSHION BULKHEAD FLAT**

RAC 13002 (concluded)
New. 08-2001

Item	Number of pieces	Description
D	1 per bin secured to above bin hanger assembly	Tie down straps: Polyester webbing 4in. wide with a minimum breaking strength of 20,000lbs. All straps must be secured to ratchet at all times whether car is loaded or empty.

NOTES:

1. Bins empty or loaded should be placed in pairs on car.
2. Paired bins are to be of equal heights
3. Bins should be placed flat and properly seated between separators on floor.
4. Loaded bins must be placed on car to ensure that weight is distributed evenly on car floor.
5. Tie down straps, item D, must be secured and tighten on winch to ensure that bin hanger assemblies are tied down at all times.
6. Bin hanger assemblies should always be placed in their lowest position and held down by tie down straps prior to moving car.

See General Rules for further details