


EMPTY CONTAINERS, FLATBED TRAILERS ON EXPRESSWAY CARS

RAC 17007

New. 10-2001

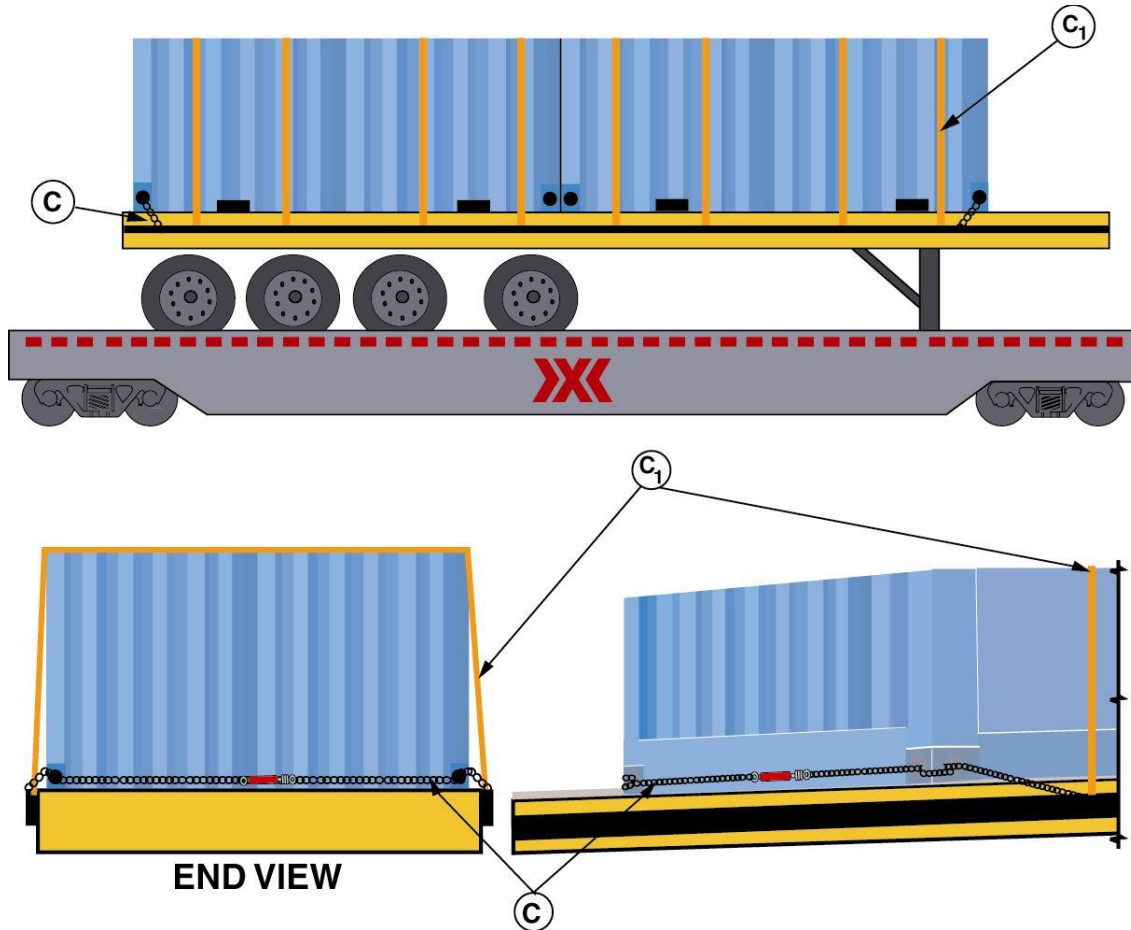

Item	No. of pieces	Description
C	2	Chain pass through the corner casting, wrap around and pass again through the same casting. Similarly for the other side. The two chains are secured in the middle of the end of the container
C-1	2 per 20 feet container 4 per 40 feet container	Tie down: Polyester straps 3 in. wide with a minimum breaking strength of 15,000 lbs.

Notes:

1. When two containers are butted tightly against each other, chains are not required at the butted ends.

See General Rules for further details.